



КАТАЛОГ

ПОРШНЕВЫХ КОМПРЕССОРОВ

Архангельск (8182)63-90-72
Астана +7(7172)727-132
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41

Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: atr@nt-rt.ru || www.aircast.nt-rt.ru

AiRcast



1,5 кВт

1,8 кВт

2,2 кВт

МОДЕЛЬ	 л	 Ц/СТ	 л/МИН	 атм	 кВт	 В	 кг	Габариты АхВхС, мм
СБ4/С-24.J1047В	24	1/1	200	8	1,5	220	27	620х300х600
СБ4/С-24.J1048В	24	1/1	260	8	1,8	220	28	600х280х680
СБ4/С-50.J1047В	50	1/1	200	8	1,5	220	39	840х435х680
СБ4/С-50.J1048В	50	1/1	260	8	1,8	220	41	850х400х740
СБ4/С-50.J2047В	50	2/1	400	8	2,2	220	58	850х435х725
СБ4/С-100.J2047В	100	2/1	400	8	2,2	220	74	1080х490х805

AiRcast



1,5 кВт

2,2 кВт

МОДЕЛЬ	 л	 Ц/СТ	 л/МИН	 л/МИН	 атм	 кВт	 В	 кг	Габариты АхВхС, мм
СБ4/С-50.LH20А-1.5	50	1/1	235	165	10	1,5	220	69	840х400х770
СБ4/С-50.LH20-2.2	50	1/1	280	200	10	2,2	220/380	69	840х400х770
СБ4/С-100.LH20-2.2	100	1/1	280	200	10	2,2	220/380	84	1150х490х850
СБ4/С-50.LB30	50	2/2	420	340	10	2,2	220/380	73	850х400х770
СБ4/С-100.LB30	100	2/2	420	340	10	2,2	220/380	88	1150х490х850

КОМПРЕССОРЫ С ПРЯМЫМ И РЕМЕННЫМ ПРИВОДАМИ СЕРИИ AIRCAST

AiRcast

3,0 кВт



МОДЕЛЬ	 л	 ц/ст	 л/мин	 л/мин	 атм	 кВт	 В	 кг	Габариты АхВхС, мм
СБ4/С-50.LB30-3.0	50	2/1	500	390	9	3,0	380	77	850х400х770
СБ4/С-100.LB30-3.0	100	2/1	500	390	9	3,0	380	92	1150х490х850
СБ4/С-50.LB40	50	3/1	530	440	10	3,0	380	90	900х400х800
СБ4/С-100.LB40	100	3/1	530	440	10	3,0	380	100	1130х500х880
СБ4/С-200.LB40	200	3/1	530	440	10	3,0	380	140	1460х640х1150

AiRcast

4,0 кВт









МОДЕЛЬ	 л	 ц/ст	 л/мин	 л/мин	 атм	 кВт	 В	 кг	Габариты АхВхС, мм
СБ4/С-100.LB50	100	2/1	630	550	10	4,0	380	130	1150х500х1000
СБ4/Ф-270.LB50	270	2/1	630	550	10	4,0	380	180	1590х500х1100

AiRcast

5,5 кВт



МОДЕЛЬ	 л	 Ц/СТ	 л/мин	 л/мин	 атм	 кВт	 В	 кг	Габариты АхВхС, мм
СБ4/С-100.LB75	100	3/1	880	740	10	5,5	380	143	1150х505х1150
СБ4/Ф-270.LB75	270	3/1	880	740	10	5,5	380	195	1650х510х1150
СБ4/Ф-500.LB75	500	3/1	880	740	10	5,5	380	230	2000х610х1250

AiRcast

7,5 кВт











МОДЕЛЬ	 л	 Ц/СТ	 л/мин	 л/мин	 атм	 кВт	 В	 кг	Габариты АхВхС, мм
СБ4/Ф-500.LT100	500	4/2	1400	1100	10	7,5	380	350	1980х610х1250



ТАНДЕМ

5,5+5,5 кВт



МОДЕЛЬ	 л	 ц/ст	 л/мин	 л/мин	 атм	 кВт	 В	 кг	Габариты АхВхС, мм
СБ4/Ф-500.LB75T	500	3/1	1760	1520	10	5,5+5,5	380	340	2000х610х1250



Компрессоры с
вертикальным
расположением
ресивера



2,2 кВт

3,0 кВт

4,0 кВт

5,5 кВт

МОДЕЛЬ	 л	 ц/ст	 л/мин	 л/мин	 атм	 кВт	 В	 кг	Габариты АхВхС, мм
СБ4/С-100.LB30В	100	2/1	420	340	10	2,2	220/380	90	630х540х1240
СБ4/С-100.LB40В	100	3/1	530	530	10	3,0	380	110	630х560х1300
СБ4/Ф-270.LB50В	270	2/1	630	630	10	4,0	380	180	650х700х1750
СБ4/Ф-270.LB75В	270	3/1	880	740	10	5,5	380	195	650х700х1800



Архангельск (8182)63-90-72
Астана +7(7172)727-132
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41

Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: atr@nt-rt.ru || www.aircast.nt-rt.ru